

# ducasa

## The 'Sunrise' - 1250w Radiant Panel Heater Class II Rated Appliance

### INSTALLATION AND OPERATING INSTRUCTIONS

#### IMPORTANT – READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE


#### SAFETY WARNINGS

- Do not use heater until it is correctly fitted to a wall using the brackets supplied.
- Do not use this appliance in a bathroom or shower room.
- This appliance must not be located immediately underneath a fixed socket outlet.
- Check the condition of heater before use. If it is damaged, the appliance must not be used until repair has been made. Only qualified personnel may carry out repairs - incorrect repairs can put the user in considerable danger and make the guarantee invalid.
- Unplug the appliance before cleaning it with a vacuum cleaner, a damp cloth or a brush. Abrasive or corrosive cleaning agents must not be used. If you do not use the appliance for a long time, you should protect it against excessive dust or dirt.
- 'DO NOT COVER' the heater as this will cause it to overheat and activate the safety cut out. If this happens a new cut out switch will need to be fitted – please contact your supplier.
- Children must not be allowed to use electrical appliances without supervision.
- Must be used on mains supply only at the voltage marked on the appliance.
- A 13amp fuse approved to BS1362 must be used if replacement is required.

For further information or in case of difficulty please contact your supplier.

#### INSTALLATION

Select a suitable position on a wall, near to a mains power socket (but not directly below it) making sure there is at least 75mm below and above the heater of unobstructed space.

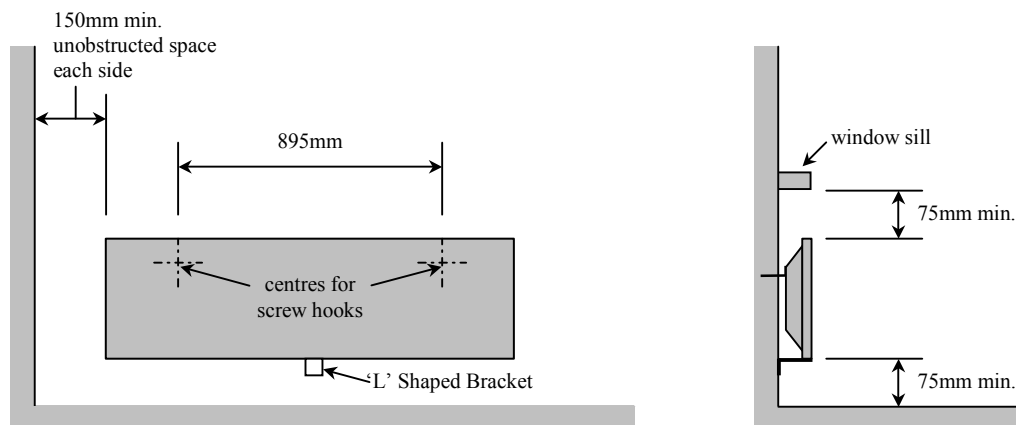

Fix the two screw hooks to the wall at measured centres of 895mm.  
Locate the appliance over the top of the screw hooks and allow it to hang in place.  
Fit the bottom 'L' shaped bracket onto the wall and then secure the heater by screwing the small screw directly into the underside of the grill.

The cable comes out from the right hand side of the heater and measures approximately 1.6m

Please Note: Although the heater is manufactured to comply with the relevant safety standards, the temperatures under a heater could discolour certain types of carpets and surfaces. If you are concerned about this, we recommend that you contact the carpet or surface manufacturer.

## USING THE HEATER

Before switching on, ensure that all packaging items are removed and that the heater is wall mounted correctly otherwise damage may occur.

Plug in and switch on at wall socket.

The element has been coated with a protective film, which will burn off during the first few minutes and may cause a small amount of fuming. This is quite normal – the fumes are non-toxic and will quickly disappear. We recommend that you open a window to ventilate the room when using the heater for the first time.

You may notice some parts of the element appearing to be hotter from time to time because of the variable airflow through the heater. This does not cause a safety hazard.

The heater grille may become discoloured with use – this is caused by airborne pollution and is not a fault.

### Power Selector / Thermostat

To switch on the heater press power switch down to the 'on' position.

The thermostat controls the heat output according to the room temperature. This ensures that the heater will not produce unnecessary heat when the room is warm. To set the temperature you require, turn the knob fully clockwise. When the room is warm enough, turn the knob back slowly until the thermostat clicks off. The heater will now maintain your selected temperature.

If the thermostat is set to its minimum setting, the heater will cycle ON and OFF to maintain a temperature of approximately 5°C to help protect against frosty conditions.



### Guarantee

Your appliance is guaranteed for two years from the date of purchase – during this period we will repair or exchange, at our discretion, any faulty or defective parts providing the appliance has been used in accordance with the operating & installation instructions and has not been misused or mistreated in any way. Any unauthorised repair or attempted repair will invalidate the guarantee.

This guarantee is additional to your statutory rights.

In the unlikely event of a problem with your heater please contact your supplier.



**“DO NOT COVER”, which acts as a reminder for the user. It is recommended that the air contacts all the surfaces of the emitter.**

U.K. Importers & Distributors of **ducasa** Advanced Heating Technology  
Heattend Products Ltd  
www.Heattend.co.uk  
Enquiries@Heattend.co.uk

